

# Quick Start Guide:

## Setting up your BLAST u4m



1

Connect BLAST u4m to power outlet.



2

When the LED is flashing red, you can pair the BLAST u4m with the BLAST u6. Press and hold the WPS buttons on the BLAST u4m and then the BLAST u6 for 3 seconds each (less than 30 seconds apart). The LED flash green while attempting to pair.



3

Use the solid green LED indicator (displays for 60 seconds at end of pairing cycle) to determine ideal location for the GigaMesh. If necessary, relocate it to a more ideal distance from the BLAST and confirm successful pairing after the GigaMesh reboots (repeating steps 2-3 as needed).

BLAST u4m location is ideal distance from the BLAST u6.

Ideal: Steady State



Move BLAST u4m close to the BLAST u6.

To far: Slow Blink (1000 msec)



Move BLAST u4m father away from the BLAST u6.

Too close: Fast Blink (250 msec)



4

If applicable, use the Jade **Wi-Fi** app to set up the BLAST. See the Jade **Wi-Fi** Quick Start Guide for guidance.

### Need help?

Contact support: 719-589-5140 | gojade.org